



RYEDRATOR



Owner's Manual

RYE-Corp. 601 Tate Coley Rd Lenoir City, TN 37771 PHONE: (865) 988-3822

MANUFACTURERS WARRANTY ONE YEAR LIMITED PARTS WARRANTY. ALL RYEDRATORS ARE WARRANTED TO THE ORIGINAL PURCHASER TO BE FREE FROM DEFECTS IN MATERIAL OR WORKMANSHIP, UNDER NORMAL USE AND OPERATION FOR A PERIOD OF (1) ONE YEAR FROM THE DATE OF PURCHASE.

RYE-Corp agrees under this warranty to repair or replace, at its discretion, any original part which fails under normal use due to faulty material or workmanship during the warranty period, providing the equipment has been unaltered, and has been properly installed, maintained, and operated in accordance with the applicable factory instruction manual furnished with the machine and the failure is reported to RYE-Corp within the warranty period. This includes the use of factory specified genuine replacement parts, purchased directly from a RYE-Corp authorized parts distributor or service agency. Use of generic replacement parts may create a hazard and void warranty certification. Labor to repair or replace these components is not covered by RYE-Corp. This warranty is void if failure is a direct result from shipping, handling, fire, water, accident, misuse, acts of God, attempted repair by unauthorized persons, improper installation, if serial number has been removed or altered, or if unit is used for purpose other than it was originally intended.

REPLACEMENT PARTS WARRANTY RYE-Corp replacement parts are warranted for a period of 90 days from the date of installation or 180 days from the date of shipment from the factory, whichever occurs first. PRODUCT CHANGES AND UPDATES RYE-Corp reserves the right to make changes in design and specification of any equipment as engineering or necessity requires.

THIS IS THE ENTIRE AND ONLY WARRANTY OF RYE-CORP. RYE-CORP'S LIABILITY ON ANY CLAIM OF ANY KIND, INCLUDING NEGLIGENCE, WITH RESPECT TO THE GOODS OR SERVICES COVERED HEREUNDER, SHALL IN NO CASE EXCEED THE PRICE OF THE GOODS OR SERVICES OR PART THEREOF WHICH GIVES RISE TO THE CLAIM. THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING FOR FITNESS OR MERCHANTABILITY, THAT ARE NOT SET FORTH HEREIN, OR THAT EXTEND BEYOND THE DURATION HEREOF. UNDER NO CIRCUMSTANCES WILL RYE-CORP BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, OR FOR THE DAMAGES IN THE NATURE OF PENALTIES, ARISING OUT OF THE USE OR INABILITY TO USE ANY OF ITS PRODUCTS. ITEMS NOT COVERED.

This warranty does not cover cleaning or painting of the unit or any component. Nor does it cover adjustments such as, but not limited to mechanical and electrical components in addition, the warranty will not cover the sump pump.

Installation Date:


Service Rep. Name:

Phone No:


RYE-Corp provides technical support for the RYEDRATOR detailed in this manual. We strongly recommend that you refer to this manual before making a call to our technical support staff. Please have this manual with you when you call so that our staff can refer you, if necessary, to the proper page. Technical support is available from 8:00 a.m. to 5:00 p.m. (EST), Monday through Friday. Technical support is not available on holidays. Contact technical at 865-684-3899. Please remember that technical support is available for service personnel only

Table of Contents

- Installation
- Maintenance
- Cleaning

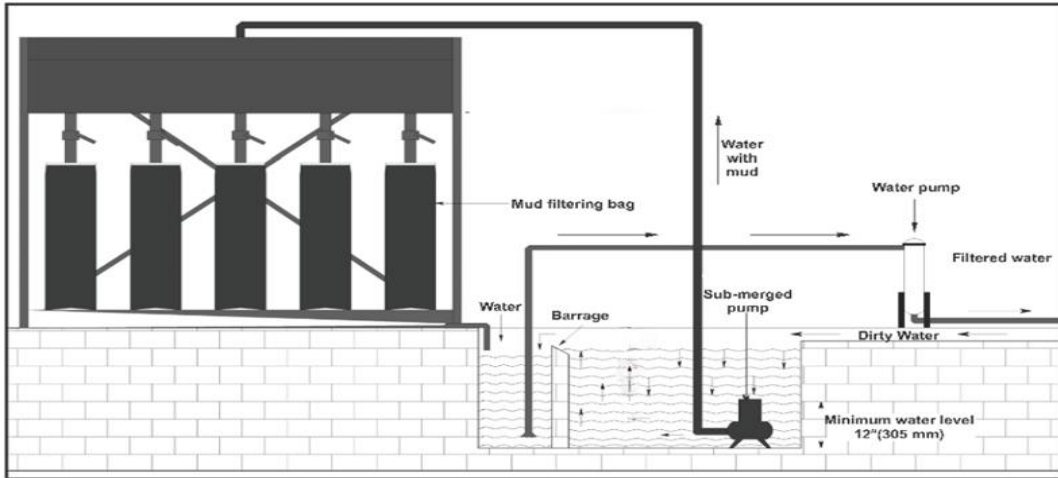

Place Ryedrator as close to the pit as possible

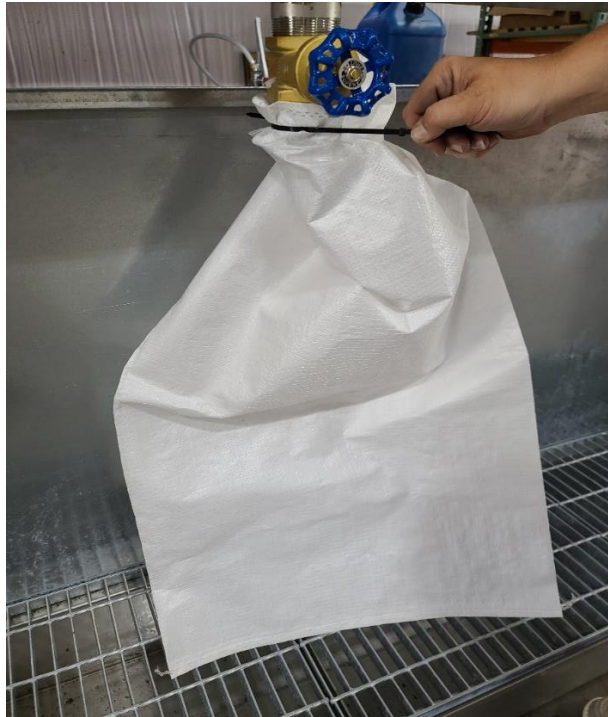

Attach bags with zip ties



Connect float switch with zip tie



Attach 2-inch barb nipple to sump pump



Attach one end of 2-inch braided hose to down spout on Ryedrator with hose clamp.



Attach other end of 2-inch braided hose to sump pump with hose clamp



Connect power cords as shown and place sump pump in pit